


GETTING STARTED

WARNING!

To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** before operating this appliance.

- Check the lint filter is clean and the water tank is empty before every load. Ensure both are replaced correctly before using your dryer.
 - Sort and load items into the dryer drum, ensuring no items are in the way of the door. Close the door (you will hear it click shut).
- ① Press 'POWER' to activate your dryer.
 - ② Your dryer will default to the 'Everyday' cycle. Select your desired drying cycle by turning the SmartTouch™ Control Dial.
 - ③ Select your preferred drying options, using the SmartTouch™ buttons on the right hand side of the panel (if you wish to select options different from the default options for the cycle).
 - ④ Touch the ▶|| button to start the cycle.

Condenser dryer control panel

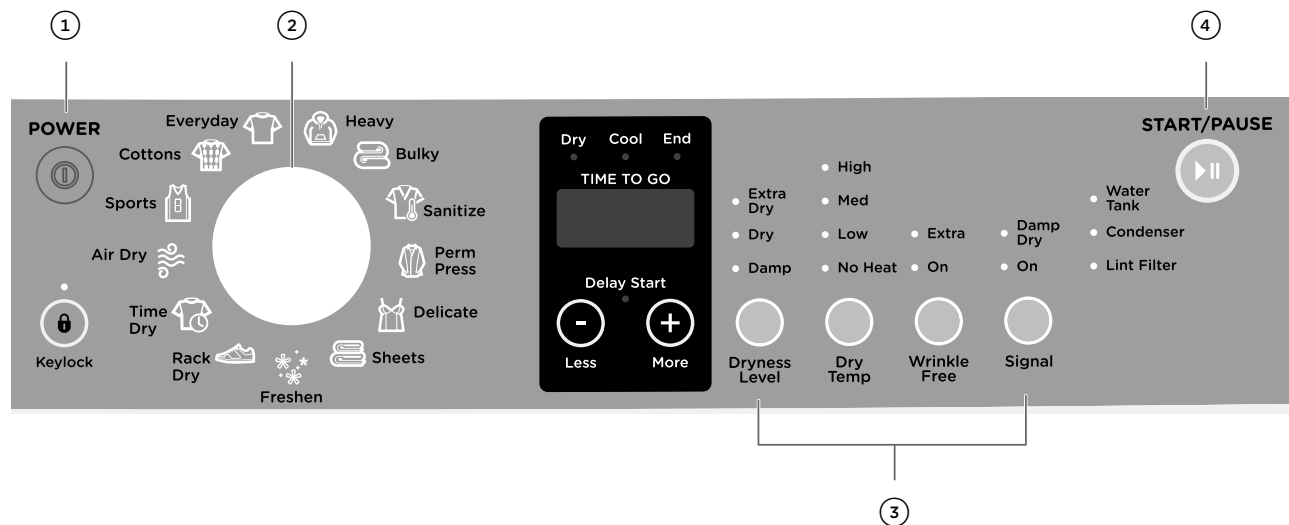

-
- If you make an invalid selection the dryer will beep to alert you.
 - When the cycle finishes, your dryer will beep and then turn off automatically. If the 'Wrinkle Free' option has been selected the machine will rotate the drum periodically blowing cool air into the drum to help minimize wrinkling and creasing of your load.
 - If you wish to stop your dryer at any point during a cycle simply touch ►|| to pause the cycle, then open the door.
 - If you wish to cancel a cycle or select a different option once a drying cycle has started, touch the ►|| button then select the new cycle or option. Touch ►|| to restart the dryer with the new cycle and/or settings.

IMPORTANT!

- **If you wish to stop the dryer before the cycle has finished you MUST remove the clothes IMMEDIATELY and spread them out to cool. DO NOT leave the clothes in the dryer or bunched up in a clothes basket. Take extreme care as the drum and the load items may be extremely hot.**
- **Failure to follow the advice in this guide may result in damage to your garments and your expectations of drying performance may not be met.**

DRYING CYCLES



Your dryer has a number of drying cycles to suit your laundry needs. Selecting the most appropriate cycle for each particular load will help ensure you get the best result.

CYCLE	DESIGNED FOR	DESCRIPTION	MAX. LOAD SIZE (KG)
Cottons	Cottons and most linens.	A high heat cycle for cottons and linens.	8
Everyday	Mixed loads consisting of cottons and polyester blends. Casual wear.	A cycle for rapid drying of everyday clothing.	8
Heavy	Heavy durable garments, eg work sweatshirts/jerseys and jeans.	A longer, high heat cycle for heavy fabrics and denim.	8
Bulky	Large coats, bed spreads, mattress covers, sleeping bags, blankets, comforters, jackets, small rugs, and similar large and bulky items.	A medium heat cycle for the special care of bulky items.	4
Sanitize	Bed linen, tea towels, socks.	A high heat cycle for reducing certain types of bacteria by 99.6%, including: Staphylococcus aureus and Pseudomonas aeruginosa. The antibacterial process occurs when high heat is used during a portion of this drying cycle.	8
Permanent Press	Business shirts and clothing that creases easily.	A short, medium heat cycle with the 'Wrinkle Free' option selected for easily creasable items.	4
Delicate	Lingerie and special-care fabrics.	A shorter, cooler cycle for carefully drying delicate and heat sensitive fabrics.	4
Sheets	Sheets, pillowcases and duvet/doona covers.	High heat cycle with reversing, to improve the movement of large items such as sheets and duvet/doona covers and help reduce tangling.	4
Freshen	Items that have been in storage or have not been worn/used for some time.	A short cycle with a burst of heat followed by cool air to help de-wrinkle and refresh items.	1 - 3 items
Rack Dry	Drying delicate items without tumbling.	Use drying rack accessory. Place items flat on the drying rack such as wool sweaters and delicate fabrics. Dry with low heat.	1 - 2 items
Time Dry	Drying items for a selected period of time.	A cycle with user selectable 30 - 150 minute drying times.	8
Air Dry	Drying items for a specific time period, without heat.	40 minute cycle with no heat.	8
Sports	Sports items, eg running gear.	A low heat cycle designed for the special care of sports items.	4

All drying cycles default to the recommended options for that cycle based on the average expected load size to be dried using that cycle. You can vary the options (eg 'Dryness Level', 'Dry Temp') to create your desired cycle. Note: some options are not available on some cycles for clothes care reasons, or because the option is not appropriate for the cycle.


To change a drying option or options you have selected after a cycle has started, touch ►|| and select your new setting, then touch ►|| again to resume the cycle with the new setting or settings.

Note: some options may not be available for selection under certain conditions and after particular stages of the drying cycle have passed.

Dryness Level

Your dryer takes the guess work out of choosing drying times by sensing the dryness of the load. When your dryer senses that the clothes have dried to the dryness level you have selected, the dryer will automatically finish the cycle.

 The dryer has five dryness levels from 'Damp' through to 'Extra Dry'. Choose the dryness level to suit your load depending on how dry you wish for your clothes to be. If you find the load is not dry enough, select the next dryness level up. The higher the level, the longer the drying time and the drier your clothes will become.



Dryness levels

Note: two lights are used to show some dryness levels. For example, to achieve the Damp Dry setting both the 'Dry' and the 'Damp' lights will be illuminated.

Airing/Cool down (Cool)

When the dryer has sensed that the load is dry it will automatically go into a cool down period. This will be a minimum of 5 minutes and could be longer depending on the conditions in the laundry room.




Cool down mode

Dry Temp

There are four drying temperatures you can choose from:

- **High:** For regular to heavy cottons.
- **Medium:** For synthetics, some blends and items labeled Permanent Press.
- **Low:** For delicates, synthetics and items labeled Tumble Dry Low.
- **No Heat:** This option may only be used with 'Air Dry' and 'Time Dry', in which items are tumbled without heat.

Touch the 'Dry Temp' button until the light next to your desired drying temperature is illuminated.

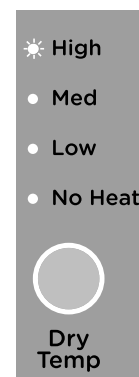

Dry temp

DRYING CYCLE OPTIONS

Wrinkle Free

If you wish to minimize wrinkling, select one of the 'Wrinkle Free' options. At the end of the cycle, the drum will rotate periodically and cool air will be circulated through the load to minimize wrinkling and creasing. This is particularly useful if you cannot remove the items immediately after the cycle ends. There are two wrinkle free options:

'On' provides 'Wrinkle Free' operation for 2 hours.

'Extra' provides 'Wrinkle Free' operation for 24 hours.

If you wish to stop the dryer at any stage during the 'Wrinkle Free' stage of the cycle, simply touch ►||. You can then open the dryer door and remove your items. Press 'POWER' to stop the cycle and turn the dryer off.



Wrinkle free option

Signal

The 'Signal' option automatically defaults to 'On' for all cycles.

This means a series of beeps will sound at the end of a cycle, to alert you that the dryer has finished. You can turn the 'Signal' off by touching the 'Signal' button twice (no lights will then be illuminated).


When you select a dryness level above damp/dry and wish your dryer to alert you to remove items once your load reaches the damp/dry stage, touch the 'Signal' button once to select 'Damp Dry'. Ensure 'On' is also selected. When your load reaches the damp/dry stage, the dryer will beep to alert you to remove your items, then continue drying until the remaining load reaches the dryness level you selected.



Signal options

Indicators

There are a number of indicators to alert you when you need to attend to your dryer, either to clean the lint filter, empty the water tank or to clean the condenser (refer to the 'Caring for your dryer' section).

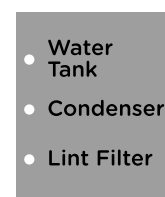

Indicators

Keylock

This option enables you to deactivate the buttons on the display panel, except for the 'POWER' and 🔒 buttons. This option helps prevent accidental button presses.

To turn Keylock mode ON or OFF, at any time when the dryer is powered on:

- Touch and hold the 🔒 button for 2 seconds.

Note: when activated, the light above the 🔒 button is illuminated.

If Keylock mode is activated and the machine is powered off:

- To turn your dryer on, press the 'POWER' button, then touch and hold the 🔒 button for 2 seconds to turn Keylock off. Select your drying cycle, any options and then touch ►|| to start the cycle.



Keylock mode

Delay Start

The 'Delay Start' option enables you to delay the start of the drying cycle from between 5 minutes and 12 hours. Times you can select are 5 min, 15 min, 30 min, 1 hour, then hourly up to 12 hours. This can be useful to time your drying to finish when you arrive home from work, or to start when power rates are lower.

To programme a 'Delay Start', simply touch the 'More' **+** button to increase the delay time and 'Less' **-** button to decrease the time or to turn 'Delay Start' off. Touch **▶||** to confirm your selection and start the countdown. Once the 'Delay Start' has been started, the time will count down on the digital display in one minute increments, the 'Delay Start' light will flash and the **▶||** light will stop flashing and turn on solid.

Note: if you hold the 'More' **+** button down, the time displayed on the screen will increase after every half a second (more convenient than touching the button repetitively). To remove a 'Delay Start' time once it is counting down, simply touch **▶||**, then touch the 'Less' **-** button to decrease the time to zero. Touch **▶||** to start the cycle immediately.

IMPORTANT!

We suggest that you avoid using 'Delay Start' for damp, non-colorfast items as this may cause dye run to occur.

Customizing dryer cycles

After using your dryer a few times you may discover there are some drying options you prefer for some cycles.

You can programme your dryer to remember the drying options you prefer for each drying cycle. For instance, you may want to set the 'Perm Press' cycle to a lower drying temperature or set the 'Everyday' cycle so it automatically has the 'Wrinkle Free' option selected.

To customize a cycle:

- ① Press 'POWER' to turn the machine on.
- ② Turn the dial to select the cycle you wish to customize.
- ③ Touch and hold any of the drying options buttons for 3 seconds. The lights will flash on and off to indicate that the machine is in cycle adjustment mode.
- ④ Select the drying options you prefer by touching the relevant option button.
- ⑤ Touch **Ⓜ** to save the selected settings. The dryer will then beep to indicate your customized cycle has been saved.

Factory reset

You can reset your dryer to the default settings it left the factory with:

- ① Turn the dial to select the 'Freshen' cycle.
- ② Touch and hold the 'Delay Start', 'More' **+**, the 'Delay Start', 'Less' **-** and 'Signal' buttons together for three seconds.
- ③ Your dryer will now be reset to the default settings.

SORTING AND LOADING

 
Always follow fabric manufacturer's care label when laundering.

Fabric care labels


Below are fabric care label "symbols" that affect the clothing you will be laundering.

DRY LABELS

Tumble dry



Dry

 


Normal




Permanent
Press/wrinkle
resistant



 Gentle/
delicate



Do not
tumble dry

 

Do not dry
(used with
do not wash)

Heat setting



High



Medium



Low



No heat/air

Special instructions



 
Line dry/
hang to dry



Drip dry



Dry flat



In the shade

CARING FOR YOUR DRYER

Cleaning your dryer

Cleaning the control panel and outer surfaces of the dryer

Use a soft damp cloth to wipe all surfaces, then wipe dry. Avoid using chemical or scouring cleaners, as these will damage the paint and plastic surfaces of your dryer.

Cleaning the inside of your dryer


It is important that you occasionally clean the inside of your dryer. If the drum has any residual dirt or lint stuck to it, remove this and wipe it clean with a damp cloth. Do not leave any metal objects in the drum, as these may cause rust.

Cleaning the lint filter

- Lint is generally formed during wearing and washing. Fibres (ie lint) released from the clothes during the drying cycle are collected in the lint filter.
- It is important to clean the lint filter after every load, as the lint produced in the drying process can become a fire hazard if it is allowed to accumulate in or around your dryer.
- The lint filter is located in the door opening (at the bottom).
- There is a warning light that will flash at the beginning of every cycle to remind you to clean the filter. The warning light will also flash on and off during the cycle if the filter becomes blocked. The filter should be cleaned as soon as the 'Lint Filter' light starts flashing. Lint becomes a fire hazard if left to build up, and will reduce the efficiency of your dryer.

To clean the filter:

- ① Open the dryer door.
- ② Remove the lint filter by pulling it up and out of the filter slot. Open it out and wipe the surface clean with your hand.
- ③ Close the lint filter and place it back in the opening. Ensure the filter is fitted correctly back in place before operating the dryer.

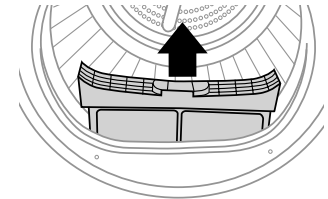

Lint filter

Have a qualified technician vacuum the lint from the dryer once a year.

Drum lamp

Note: the drum light is not consumer replaceable. If this light should ever stop working, call for service.



When the door is opened, the drum light automatically turns on and remains on for two minutes. When the door is closed, the drum light will remain on for 30 seconds.

BEFORE YOU CALL FOR SERVICE

User warnings

Your dryer is capable of diagnosing a number of its own problems. It will sound a continuous series of beeps and display a code when it has a problem that you can correct yourself. All control panel lights will turn off and a code will be displayed to inform you what the problem is. To stop the beeps sounding, press any button on the control panel. Do not try to continue your drying cycle once you stop the noise, you must address the problem the dryer is alerting you to.

Check this chart before you call for service.

PROBLEM	DISPLAYED AS	WHAT TO DO
Keylock is activated.	KEY LOC	Touch and hold the  button for 2 seconds to deactivate the Keylock.
The lint filter is blocked and needs to be emptied.	LInE cLn	Empty the lint filter and then replace it. Check the lint filter is not damaged. Check there is nothing else stuck in the lint filter holder which may be blocking the air flow. Check the lint filter is in place correctly in your dryer.
The water tank is full and needs to be emptied.	H2O FULL	Check if the water tank is full. Empty the water tank. If using the drain hose, check whether the water tank or drain hose is blocked. Check the drain hose is still attached at the back of the machine, and is not kinked or squashed.
The condenser needs to be cleaned.	cLn cOND	Clean the condenser (refer to the 'Caring for your dryer' section). Ensure the condenser unit has been placed or replaced correctly into your dryer.
The door is not closed.	door OPEn	Close the door fully and touch  . Try opening and closing the door again. Reposition the load, make sure the load is correctly in the drum and that protruding items are not stopping the door from closing.

Once you have addressed the issue the user warning was alerting you to, try using your dryer as per usual.

If the symptom persists, call your properly trained installer.

When a continuous series of beeps is sounded, all the lights turn off on the control panel and a number appears on the display, a fault has occurred. The dryer will automatically enter this mode if a fault occurs. The fault code will be displayed as $E r r$ followed by a number on the digital display. To stop the beeps, touch any button then perform the following steps:


- ① Turn your machine off at the power point.
- ② Wait one minute and turn it back on.
- ③ Check your machine is installed correctly (refer to the 'Installation instructions' section).
- ④ Remove your dryer load and retry.
- ⑤ Perform a 'Time Dry' cycle, eg 'Time Dry' (30 mins).
- ⑥ If the fault re-occurs repeat steps ① and ②.
- ⑦ If the machine still will not work you will be required to call a properly trained installer to arrange service (refer to the 'Limited warranty' section). Record the fault code number displayed and the serial number of your dryer (located on the inside of the door below the glass) before calling. The fault code will indicate to the service technician what the problem could potentially be.

If a fault code is being displayed, you can still turn your dryer off by pressing 'POWER'.


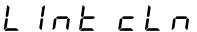

TROUBLESHOOTING

The following is a list of problems you may encounter when using this appliance and some suggestions that may help to correct the problem. If you still have problems, please contact a properly trained installer.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Dryer shakes or makes noise.	Some shaking/noise is normal.	Move dryer to an even floor space, or adjust leveling legs as necessary until even.
	Dryer may be sitting unevenly.	
Clothes take too long to dry.	Improper sorting.	Separate heavy items from lightweight items (generally, a well-sorted washer load is a well-sorted dryer load).
	Large loads of heavy fabrics (like beach towels).	Large, heavy fabrics contain more moisture and take longer to dry. Separate large, heavy fabrics into smaller loads to speed up drying time.
	Non-venting dryer.	Condensing dryers usually take longer to dry than a vented dryer.
	Controls improperly set.	Match control settings to the load you are drying.
	Lint filter is full.	Clean the lint filter before every load.
	Blown fuses or tripped circuit breaker.	Replace fuses or reset circuit breakers. Since most dryers use 2 fuses/breakers, make sure both are operating.
	Overloading/combining loads.	Do not put more than one washer load in the dryer at a time.
	Underloading.	If you are drying only one or two items, add a few items to ensure proper tumbling.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
<p>The ‘Dry’ dryness level was chosen but load is still damp.</p>	<p>Load consists of a mixture of heavy and light fabrics.</p>	<p>When combining heavy and light fabrics in a load, choose a higher dryness level.</p>
	<p>Lint filter, condenser, and/or air intake vent located on the front of the dryer is blocked.</p>	<p>Inspect and clean lint filter, condenser, and/or air intake vent located on the front of the dryer.</p>
	<p>Dryness sensors are dirty.</p>	<p>Clean the sensors with a moist cloth. These are the metal ribs located in the drum behind the lint filter.</p>
<p>Control buttons not responding.</p>	<p>Controls accidentally put in service mode.</p>	<p>Press ► .</p>
	<p>Controls accidentally put in ‘Keylock’ mode.</p>	<p>Hold the  button for 3 seconds to unlock the dryer.</p>
	<p>Controls performed an incorrect operation.</p>	<p>Check the building’s fuse/circuit breaker box and replace fuse or reset breaker. Note: electric dryers use two fuses or breakers.</p>
<p>Dryer doesn’t start.</p>	<p>Control panel is “asleep”.</p>	<p>This is normal. Press ‘POWER’ to activate the control panel.</p>
	<p>Dryer is unplugged.</p>	<p>Make sure the dryer plug is pushed completely into the outlet.</p>
	<p>Fuse is blown/circuit breaker is tripped.</p>	<p>Check the building’s fuse/circuit breaker box and replace fuse or reset breaker. Note: electric dryers use two fuses or breakers.</p>
	<p>Dryer was accidentally paused when starting ‘Delay Start’.</p>	<p>If the light on the ► button is flashing, the dryer is paused. Press ► to restart the countdown.</p>
	<p>Water tank is full.</p>	<p>If the ‘Water Tank’ light is on, you must empty the water tank before the dryer will start. Refer to the ‘Caring for your dryer’ section for instructions on emptying the water tank.</p>

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
No numbers displayed during cycle, only lights.	Dryer is continuously monitoring the amount of moisture in the clothes.	This is normal. When the dryer senses a low level of moisture in the load, the dryer will display the dry time remaining.
'TIME TO GO' jumped to a lower number.	The estimated time may change when a smaller load than usual is being dried.	This is normal.
Cannot make a selection and the dryer beeps twice.	The dryness level, temperature, or option that you are trying to select is incompatible with the chosen dry cycle.	This is normal.
Dryer is running but  is displayed in 'TIME TO GO'.	The 'Wrinkle Free', 'Extra' option was chosen.	This is normal. During extended tumbling, the time remaining is not displayed.
 Clean lint filter (message).	'POWER' button was activated.	Press  to begin a dry cycle and the message will disappear.
Dryer doesn't heat.	Fuse is blown/circuit breaker is tripped; the dryer may tumble but not heat.	Check the building's fuse/circuit breaker box and replace both fuses or reset both breakers. Your dryer may tumble if only one fuse is blown or one breaker tripped.
Inconsistent drying times.	Type of load and drying conditions.	The load size, types of fabric, wetness of clothes and the condition of the lint filter, condenser, and/or air intake vent located on the front of the dryer will affect drying times.
	Excess debris has collected in the condenser preventing proper airflow.	Refer to the 'Caring for your dryer' section.
Glow at the rear of the drum.	Heaters behind the drum.	This is normal. Under certain drying conditions and room ambient lighting, the glow of the heaters may be visible at the rear of the drum.

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Clothes are still wet and dryer shut off after a short time.	The door was opened mid-cycle. The load was then removed from the dryer and a new load put in without selecting a new cycle.	A dry cycle must be reselected each time a new load is put in.
	Small load.	When drying 3 items or less, choose 'Time Dry'.
	Load was already dry except for collars and waistbands	Choose 'Time Dry' to dry damp collars and waistbands. In the future, when drying a load with collars and waistbands, choose a higher dryness level.
	Dryer is not level.	Move dryer to an even floor space or adjust leveling legs as necessary until even.
Clothes are wrinkled.	Overdrying.	Select a shorter drying time. Remove items while they still hold a slight amount of moisture. Select a lower dryness setting.
	Letting items sit in dryer after cycle ends.	Remove items when cycle ends and fold or hang immediately, or use the 'Wrinkle Free', 'Extra' option.
	Overloading.	Separate large loads into smaller ones.
Clothes shrink.	Some fabrics will naturally shrink when washed. Others can be safely washed, but will shrink in the dryer.	To avoid shrinkage, follow garment care labels exactly.
		Some items may be pressed back into shape after drying. If you are concerned about shrinkage in a particular item, do not machine wash or tumble dry it.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
Greasy spots on clothes.	Improper use of fabric softener.	Follow directions on fabric softener package.
	Drying dirty items with clean ones.	Use your dryer to dry only clean items. Dirty items can stain clean items and the dryer.
	Clothes were not completely clean.	Sometimes stains which cannot be seen when the clothes are wet appear after drying. Use proper washing procedures before drying.
Lint on clothes.	Lint filter is full.	Clean lint screen before each load.
	Improper sorting.	Sort lint producers (like chenille) from lint collectors (like corduroy).
	Static electricity can attract lint.	See suggestions in this section under 'Static occurs'.
	Overloading.	Separate large loads into smaller ones.
	Paper, tissue, etc, left in pockets.	Empty all pockets before laundering clothes.
Static occurs.	No fabric softener was used.	Try a recommended fabric softener.
	Overdrying.	Try a recommended fabric softener. Adjust setting to a lower dryness level.
	Synthetics, permanent press and blends can cause static.	Try a recommended fabric softener.
Collars and waistbands still wet at end of cycle.	The dryness monitor senses that the body of the clothes is dry.	Choose 'Time Dry' to dry damp collars and waistbands. In the future, when drying a load with collars and waistbands, choose a higher dryness level.
Slight variation in metallic color.	This is normal.	Due to the metallic properties of paint used for this unique product, slight variations of color may occur due to viewing angles and lighting conditions.
Dryer continues to tumble.	'Wrinkle Free', 'Extra' was selected.	Ensure 'Wrinkle Free', 'Extra' option is not selected.