


STORAGE FEATURES

Integrated Wine Cabinet

Easy-clean design with evenly distributed lighting and aluminum trims.

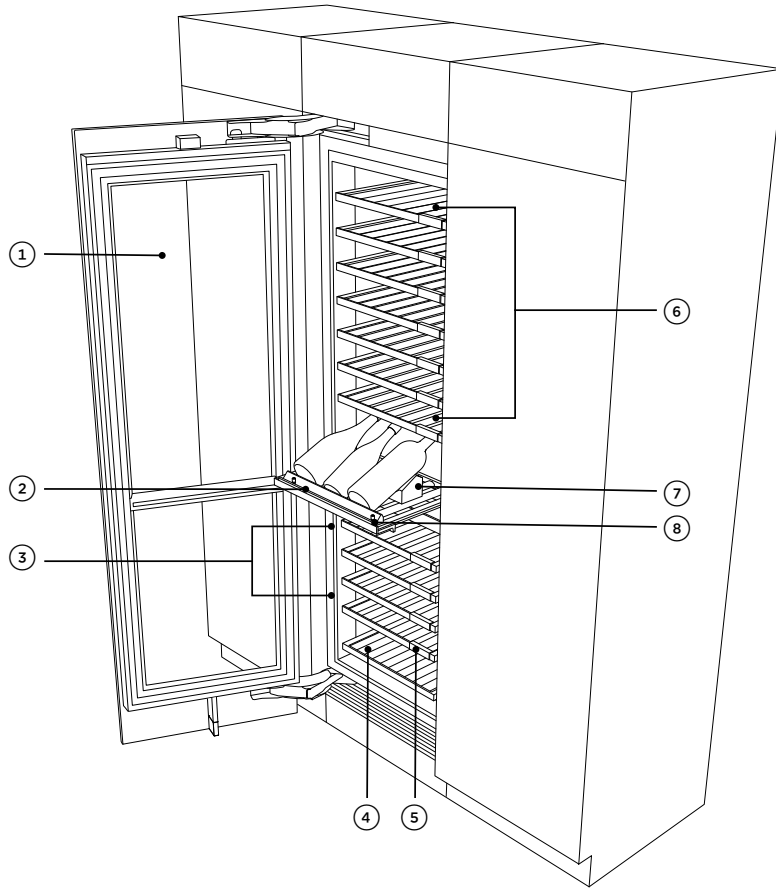

Cabinet features


- ① UV tempered glass door
- ② Display handle
- ③ Interchangeable Lower bottle racks
- ④ Bulk storage rack
- ⑤ Wine bottle labels
- ⑥ Interchangeable Upper bottle racks
- ⑦ Display cradles
- ⑧ Display rack









WINE CABINET COMPONENTS

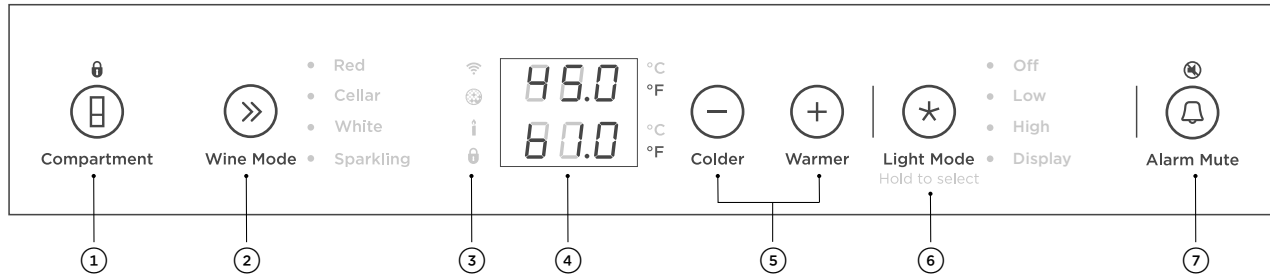Bottle racks	Removable bottle racks (white oak)*
Accessories	Wine display kit Wine label kit

* Racks may be different sizes. Ensure you have the correct dimensions when replacing racks,

 CONTROL PANEL



- ① Allows you to unlock the control panel and enable compartment selection. Press  for 4 seconds to activate your appliance for the first time.
The control panel will automatically lock when inactive for more than 10 seconds or when the door is closed. To unlock, press  for two seconds.
- ② Allows you to select the wine mode for the selected compartment.
- ③  Illuminates to show wireless remote mode is enabled.
 Illuminates to indicate that Sabbath mode is activated.
 Illuminates to indicate that the keys on the control panel are locked. When the door is closed the display is automatically locked.
 Illuminates to indicate that carbon filter replacement is required.
- ④ Displays the set temperature of the compartments.
To change between Celsius and Fahrenheit on the display:
 - Press  and  together for four seconds.
- ⑤ Allows you to adjust the temperature of the selected compartment.
- ⑥ Allows you to select the light mode for the selected compartment.
- ⑦ Deactivates the door alarm for 20 minutes.

ACTIVESMART™ SPECIAL FEATURES

Variable temperature zones

The serving temperature of your wine is crucial for your taste and enjoyment, therefore 'Wine Modes' have been carefully designed to both care for your wine and provide the ideal serving temperature for all wine varieties.

The separate modes allow you to adjust the temperature in both compartments independently.

Not all wines will improve over time. Check with your wine merchant for more information regarding the best storage conditions for your wine.

WINE MODES		TYPES OF WINE TO STORE
Red (16°C/61°F)	'Red Mode' is suitable for short term storage of light, fruity and full-bodied reds at serving temperature.	Pinot Noir, Merlot, Malbec, Shiraz/Syrah, Chianti, Cabernet Sauvignon, Vintage Port.
Cellar (12°C/54°F)	For longer term storage of all wine varieties, 'Cellar Mode' provides conditions suitable for aging wines.	All varieties.
White (8°C/46°F)	'White Mode' is suitable for short term storage of aromatic white wines and Rose at serving temperature.	Sauvignon Blanc, Chardonnay, Riesling, Pinot Gris, Viognier, Chablis, Gewürztraminer, Rosé.
Sparkling (7°C/45°F)	'Sparkling Mode' is suitable for short term storage of all sparkling wines at serving temperature.	Sparkling wines (eg Méthode Champenoise, Metodo Classico) Champagne, Cava, Prosecco.

Light modes

Four Light Modes are available to choose from. Select a Light Mode that suits the desired illumination of bottles as well as the surrounding environment.


WINE MODES	
Off	Select "Off" to turn off all compartment lights.
Low	The dimmest setting available; softly illuminating the interior of your Integrated Wine Cabinet while allowing it to blend into the surrounding environment.
Display	Brightly illuminates bottles on the display rack while all other racks remain dimly lit, bringing emphasis to those extra special bottles.
High	Turns all compartment lights to full brightness; the perfect mode for showcasing your wine collection.

USING YOUR APPLIANCE

Temperature control

At initial startup, each **WINE MODE** will automatically default to the recommended temperature setting. Once you have selected the compartment and required **WINE MODE**, the temperature can be adjusted as desired. The selected setting will be saved for future use.


» Selecting the Wine Mode

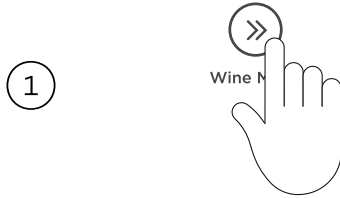

Select the desired compartment.


Press » to scroll through the available modes. The light next to the name of the **WINE MODE** will illuminate as you scroll to indicate which mode is selected.

Adjusting the temperature

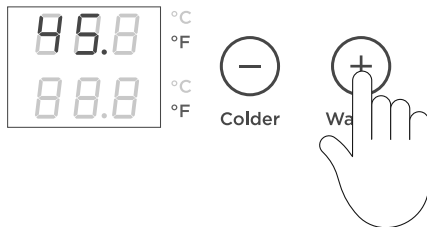


Press + to increase the temperature of the selected food mode.

Press - to decrease the temperature of the selected food mode.

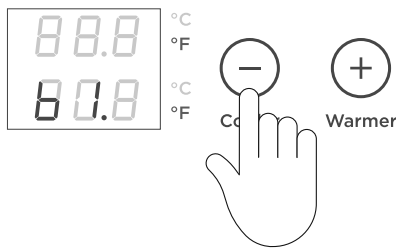

USING YOUR APPLIANCE

★ Selecting the Light Mode

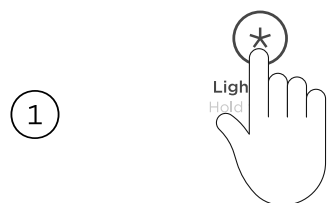

To activate a Light Mode:

Press ★ repeatedly to scroll through the available **LIGHT MODE** settings and select your preferred mode.

Press ★ for two seconds to activate.

A blinking light indicates the current position when scrolling through the list.

To deactivate a Light Mode:


Press ★ for two seconds to deactivate.

When opening the door of your product, all internal lights will illuminate to full brightness. Upon closing the door, your appliance will remember the previously selected **LIGHT MODE**

Note: 'Display' and 'High' modes will default to 'Low' after a set duration. For longer term storage, we recommend turning your lights to **OFF**.


🔒 Key lock

Allows you to disable the buttons on the control panel. Suitable when cleaning your appliance.

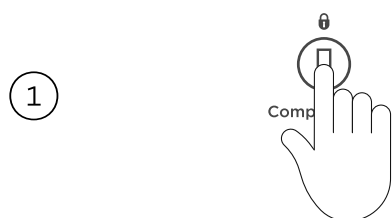

To activate:

Press □ for two seconds. The 🔒 icon on the control panel will illuminate.

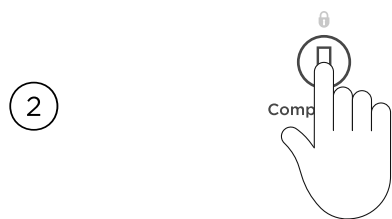


To deactivate:



Press □ for two seconds. The 🔒 icon will dim.


USING YOUR APPLIANCE

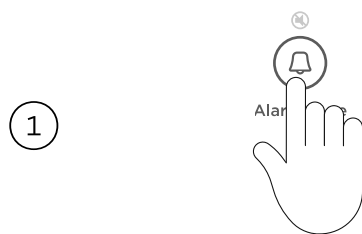Alarm mute



To activate:


To activate, press  once. The  will illuminate to indicate the refrigerator is muted.

ALARM MUTE will deactivate after 20 minutes. Press  To deactivate manually, Closing the door also deactivates the **ALARM MUTE**.


Door alarm

- If the door is left open, the alarm will beep after 90 seconds.
- If the door remains open, subsequent beeps will sound every 30 seconds for five minutes.
- If the door remains open for five minutes or longer, an alarm will sound continuously and the interior compartment light(s) will turn off.


Key mute

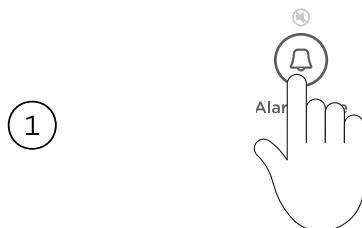


To activate:

Press  for two seconds, a single beep will sound to indicate key mute is activated. All key sounds are now muted.





To deactivate:

Press  for two seconds, a single beep will sound.

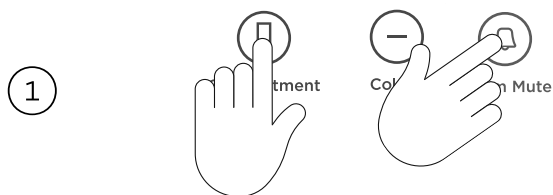Sabbath mode

  

To activate:

Press ,  and  together for four seconds. The  icon on the control panel will illuminate. When activated, the display, all alarms and lights are deactivated for 80 hours.

To deactivate manually:

Press ,  and  together for four seconds.

Note: If you turn off your appliance while in Sabbath mode, it will resume automatically once the appliance is switched on again.